



©Anker Innovations Limited. All rights reserved, registered in the United States and other countries.

Anker Innovations Limited
Unit 56, 8th Floor, Tower 2, Admiralty Centre, 18 Harcourt Road, Hong Kong




Model: T8224, T8026
51005006053_V1



Quick Start Guide

eufy Video Doorbell C30
with Chime

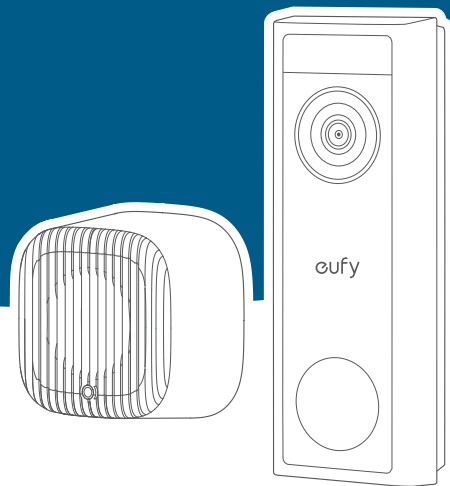


User Guide

What's in the Box

For Doorbell Installation



Video Doorbell
C30

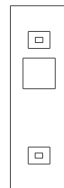


Mounting
Bracket



Screw Hole
Positioning Card




15° Mounting
Wedge

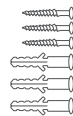

Screw Pack




Detaching Pin

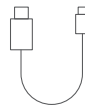


USB-C
Charging Cable

For Chime Installation

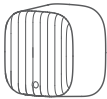


Chime

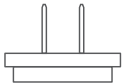


Power Adapter x2

Others

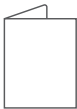


Quick Start Guide

Tools You Will Need

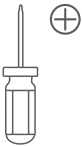


Phillips
Screwdriver

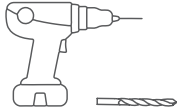

Power Drill
15/64 in (6mm) Drill Bit

At a Glance

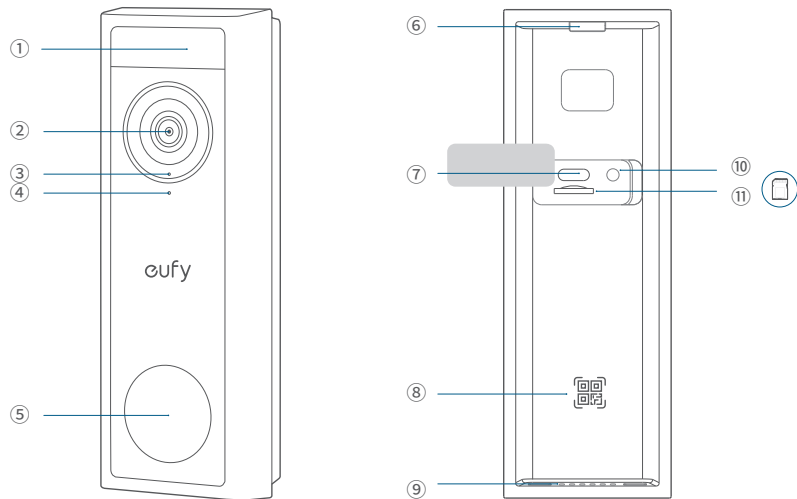

① Motion Sensor

② Camera Lens

③ Microphone

④ Ambient Light Sensor

⑤ LED Ring / Doorbell Button

⑥ Detaching Mechanism

⑦ USB-C Port

- Use to charge the doorbell.

⑧ QR Code

- Scan to add the doorbell in the app.

⑨ Speaker

⑩ SYNC Button

- Press to turn on the doorbell.
- Press and hold for 2 seconds until you hear a beep to set up the doorbell. (Optional)
- Press quickly 5 times within 3 seconds to turn off the doorbell.

⑪ SD Card Slot

Before Installation


1. Download eufy App

💡 Make sure your app is updated to the latest version.




2. Fully Charge the Doorbell

Fully charge the doorbell before first use.

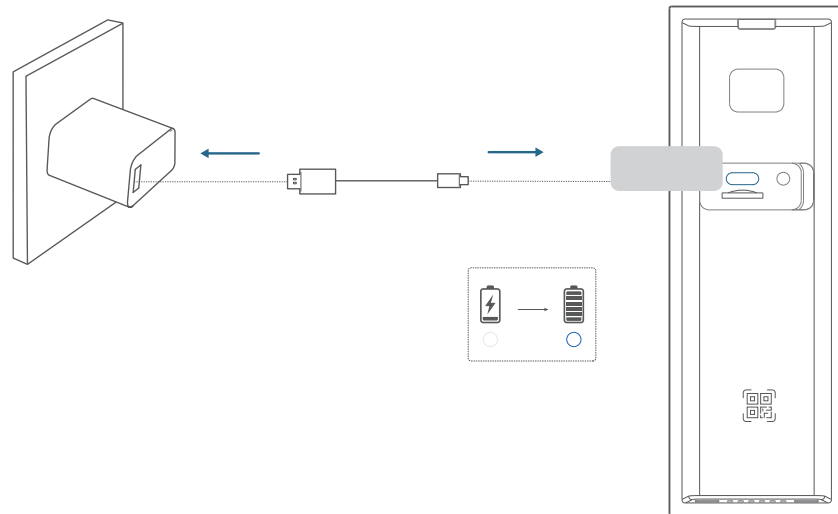

3. Add Video Doorbell C30


Open the eufy app, and follow the in-app instructions to add Video Doorbell C30.

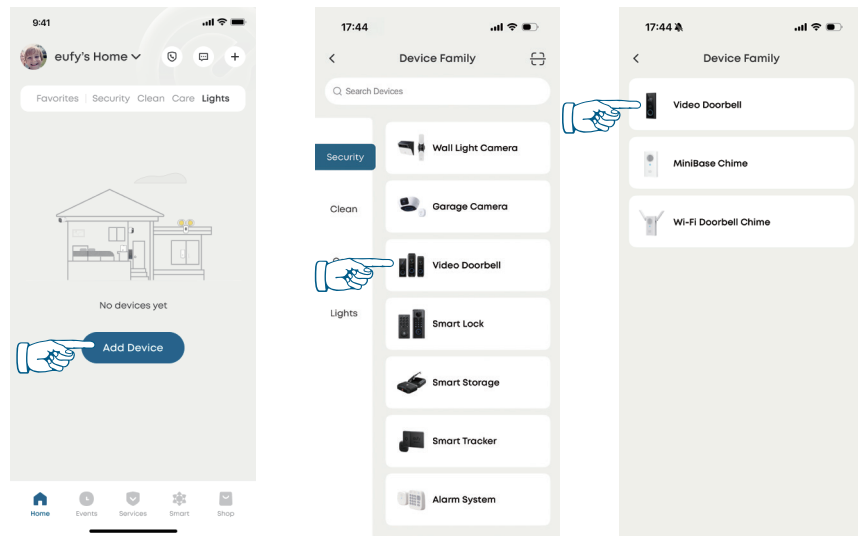

4. Choose a Location


1 Take the video doorbell to your front door and check the live view in the app.

- Recommended height: 48" (1.2 m) above the ground.
- Use existing holes and anchors if you can.
- If placing near a side wall, ensure the wall is not in the view to prevent IR light reflection and blurry night vision.
- Use the 15° mounting wedge to adjust the angle.

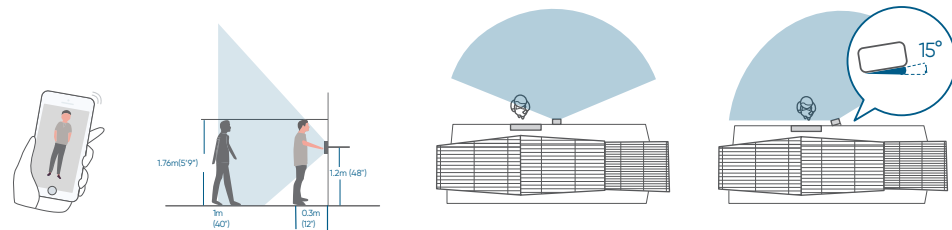


2 Mark the drilling points with the screw hole positioning card.

💡 For hard surfaces (brick, concrete, stucco), use a **15/64" (5.95 mm)** drill bit to make 2 holes.

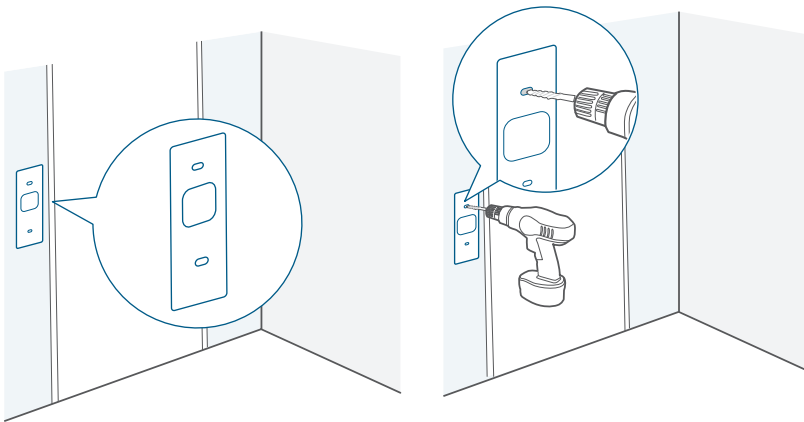


Mount the Bracket

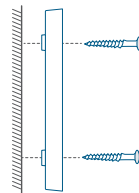


Mounting
Bracket

Without 15° Mounting Wedge

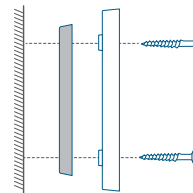


Mounting
Wedge Mounting
Bracket

With 15° Mounting Wedge

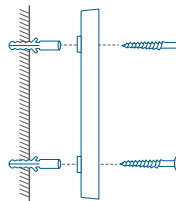

Mounting
Bracket

Without 15° Mounting Wedge

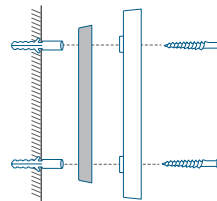


Mounting
Wedge Mounting
Bracket


With 15° Mounting Wedge

Install the Doorbell

- 1 Align the doorbell with the bottom of the mounting bracket.

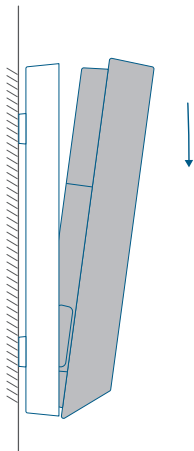

- 2 Press the top until it clicks.

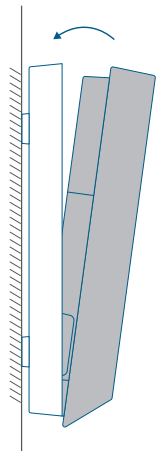


Install the Chime


1. Connect the power connector to your chime.

*The power connector varies by region.


- 1 Align the power connector with the chime

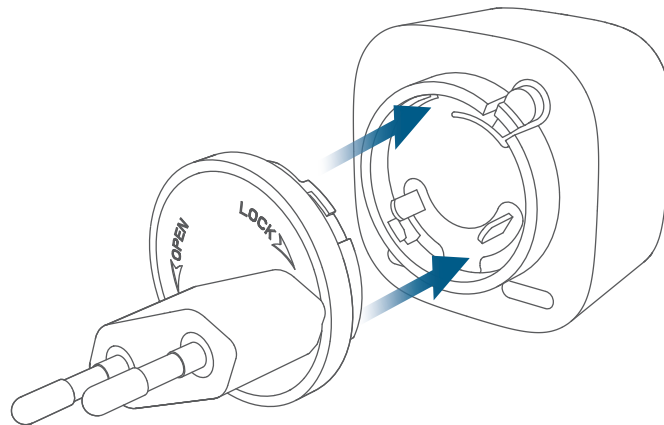

2 Twist to lock


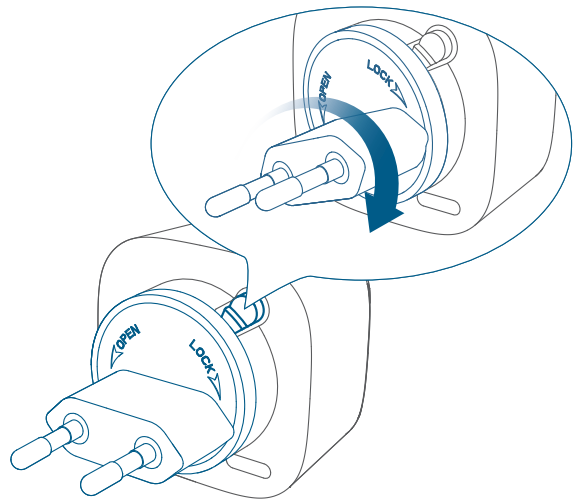


2. Plug the chime into a wall outlet.

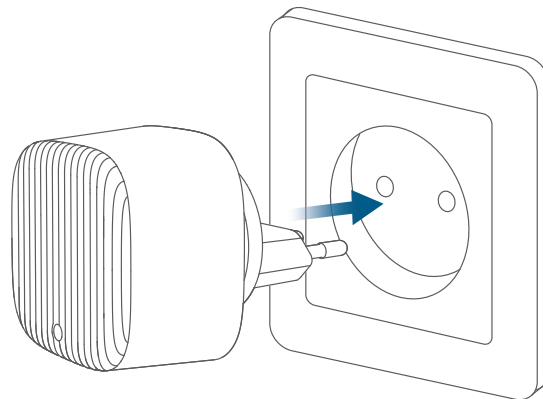

3. Connect your chime to the eufy app.


Option 1: Scan the QR code on the device.

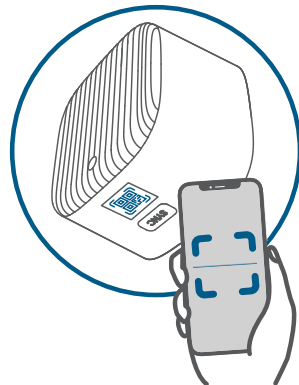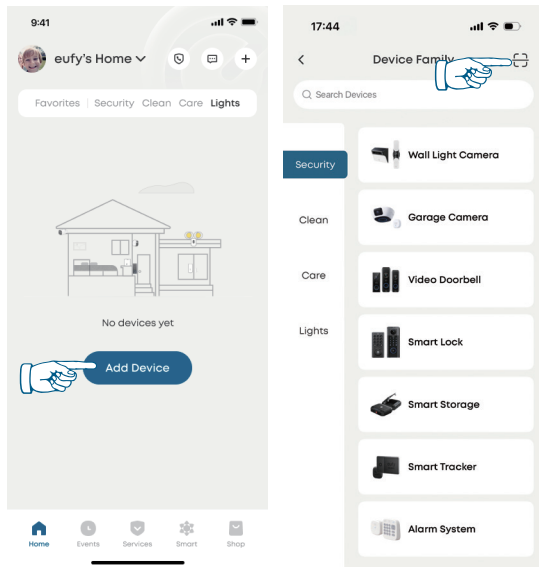


Option 2: Press the SYNC button.

*Make sure Bluetooth is enabled on your phone.

1. Press the SYNC button until you hear a beep and the LED indicator flashes blue.
2. A fast pair screen will pop up automatically. Follow in-app instructions to add the device.

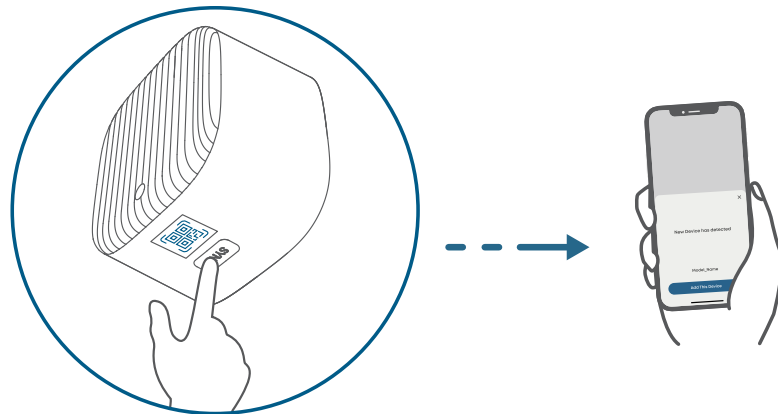

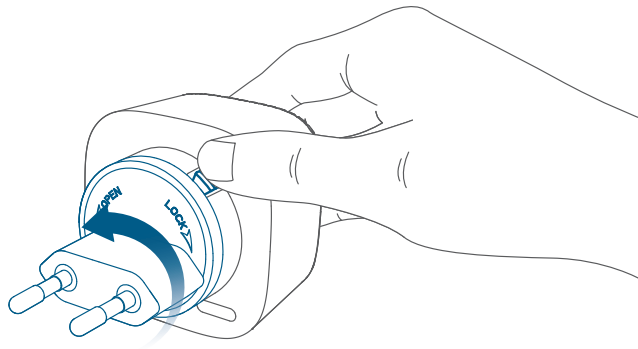

To remove the power plug:
Press the release latch and rotate to the **Open** position.

Customer Service



12-month limited warranty



(US/CA) +1 (800) 988 7973
(UK) +44 (0) 1604 936 200
(DE) +49 (0) 69 9579 7960
(中国) +86 400 0550 036

(日本) 03 4455 7823
(Egypt) +20 8000 000 826
(UAE) +971 8000 320 817
(Kuwait) +965 22069086
(KSA) +966 8008 500 030



support@eufy.com



@EufyOfficial



@EufyOfficial



@EufyOfficial



PAP 22
Raccolta Carta