

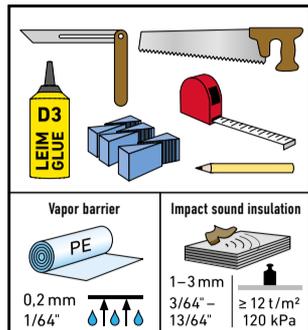
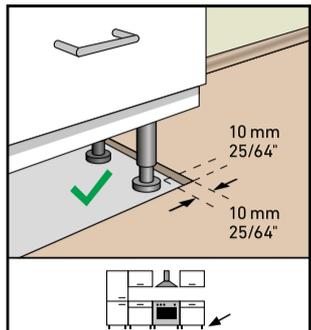
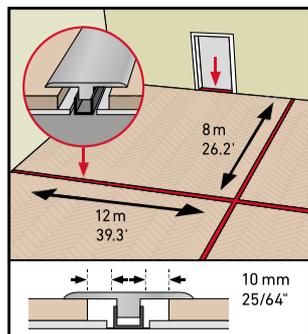
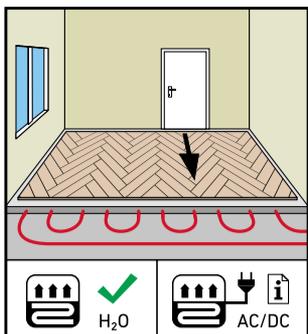
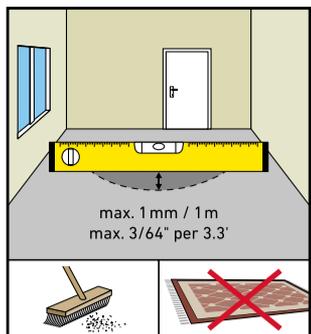
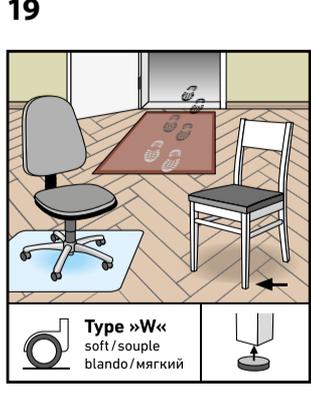
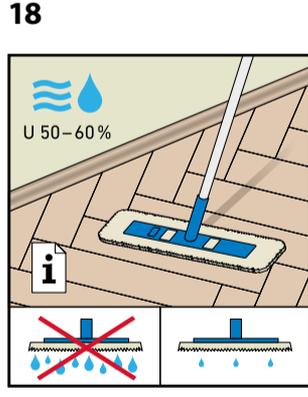
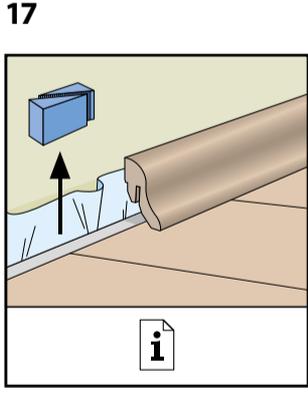
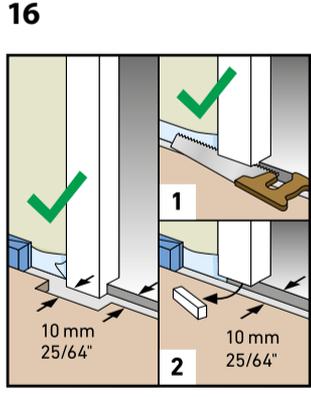
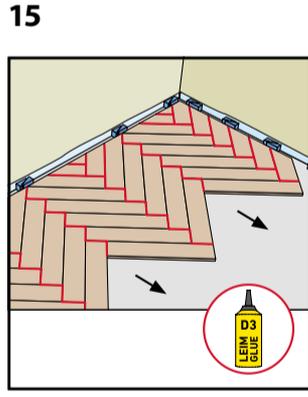
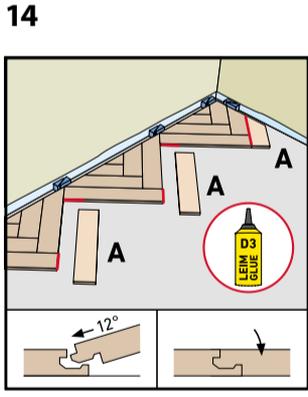
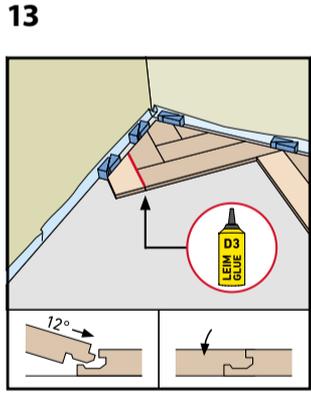
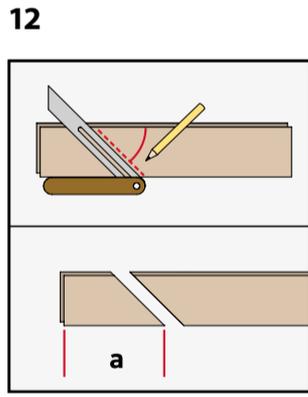
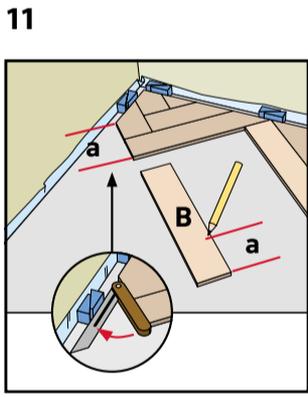
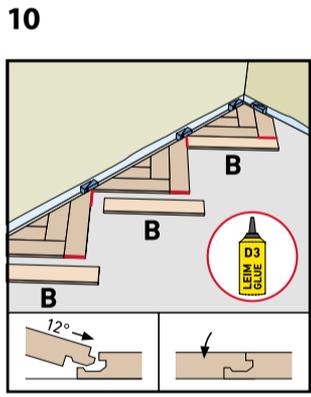
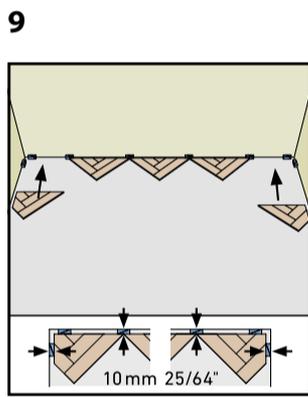
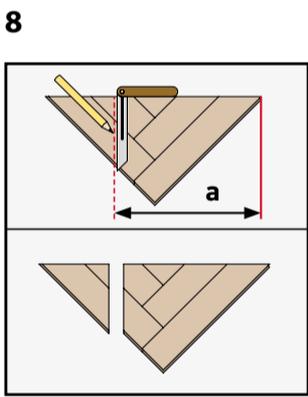
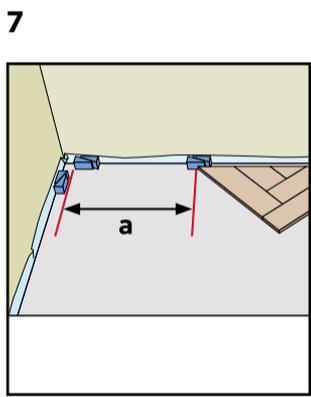
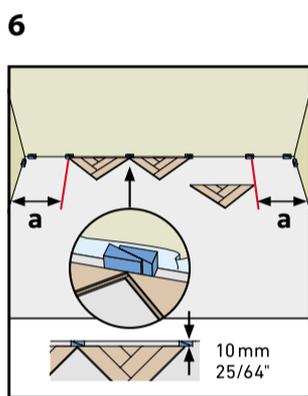
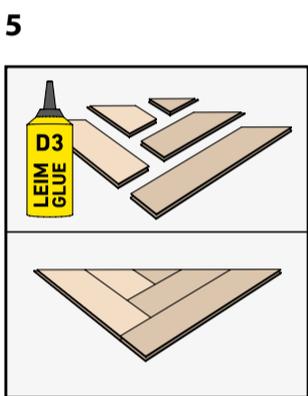
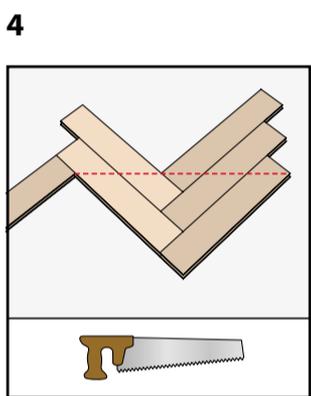
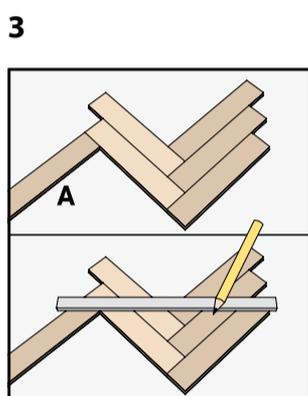
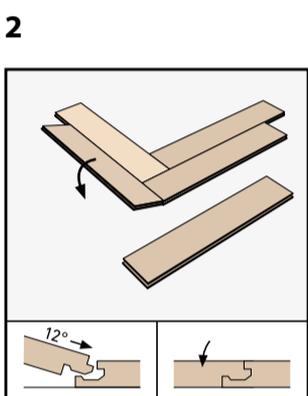
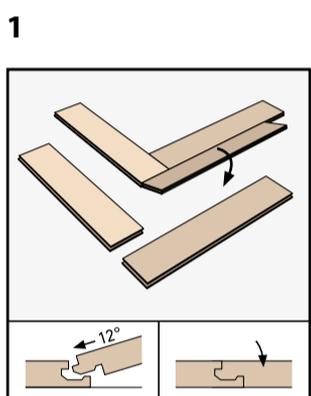
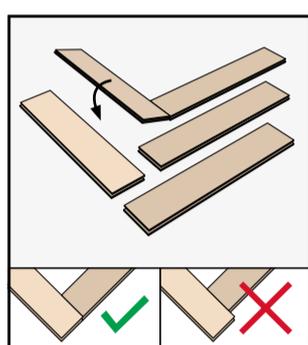


This laminate flooring is not suitable for installation on wooden base floors.

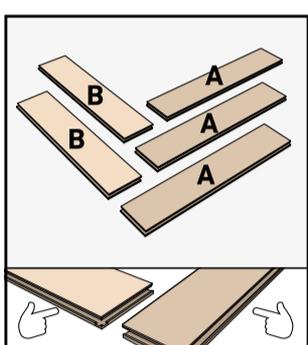

Installation

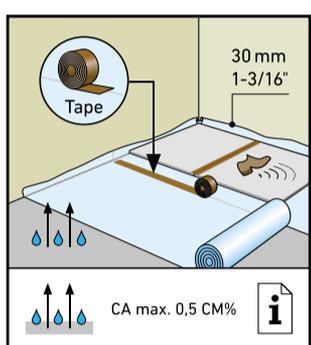

Installation film on YouTube:

